INSTRUCTIONS

KENDAL LIGHTING INC.

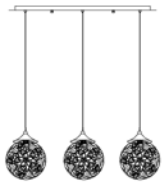

PF40-3LBR-CH PF61-3LBR-CH
PF41-3LBR-CH PF62-3LBR-CH
PF42-3LBR-CH
PF43-3LBR-CH

Safety Instructions

- **CAUTION: All electrical connections should be done by a qualified electrician.**
- Follow and save these instructions.
- Always disconnect power at circuit breaker or unplug from wall outlet before servicing.

Warning: Replace with lamps suitable for use in open fixture.

Unpack your fixture, you should have the following items:

A.Mounting plate

B.Canopy

C.Cap nut 2PCS

D.G9 50W bulb 3PCS

E.glass shade 3PCS

Parts bag

1.Anchor 2PCS

2.Screws 2PCS

3.Wire nuts 3PCS

4.Tool 2PCS

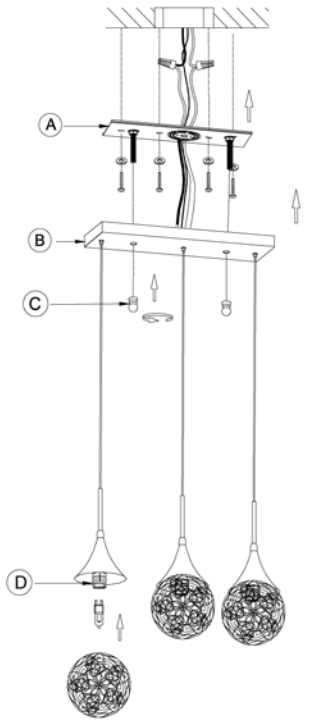

#1

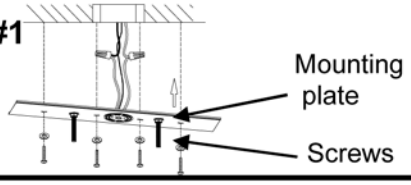

Attach the mounting plate to junction box with screws.

#2

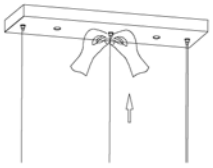

Before installation to ceiling,adjust fixtures to desired length by pushing wire up into canopy,then coiling up excess wire, minor adjustment can be made after installation.To lower or lengthen wire,depress button sleeve located where wire comes out of canopy.

#3

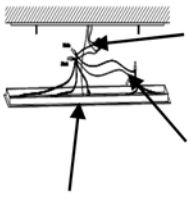

Ground wire
(Copper or green))

Connect the GROUND WIRE from junction box to GROUND with from fixture by using a wire nut. (Or attach them to the mounting plate with a green ground screw)Connect the NEUTRAL WIRE from junction box to NEUTRAL (or WHITE) wire from fixture with a wire nut.Connect the LINE WIRE from junction box to LINE (or BLACK) wire from fixture with a wire nut.

#4

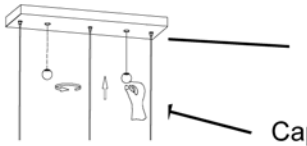

Attach the canopy to the mounting plate with screws provided.

#5

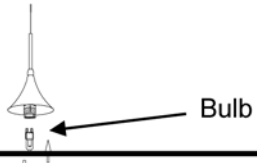

Install the G9 50W bulb

#6

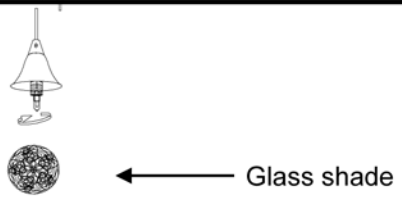

Install the glass on the lampholder,Do not over tighten.